



QR300 Firefighting Suppression Skid “How to Winterize”



NOTE: Flaman believes in continuous improvement and as such, manuals, brochures and specifications are subject to change.

Published: Sept 19, 2024

Step 1: Remove the highlighted connection.



Step 2: Remove pump drain plug.

Step 3: Tilt skid forward to drain tank.




Step 4: Remove nozzle from hose on reel and blow air through the hose. Water will run out of pump drain hole. Blow air through hose reel until water no longer drains out of pump drain hole. Must tap Cap200 cap to fit your male air fitting tip.



**OPTIONAL
BLOWOUT KIT**
RB200-150 Reducer
CAP200 Cap



Step 5: Pour winter antifreeze into hose while holding up above tank. Pour until hose fills and over flows (approx. ½ gallon). Once again blow air until antifreeze runs out of pump drain hole

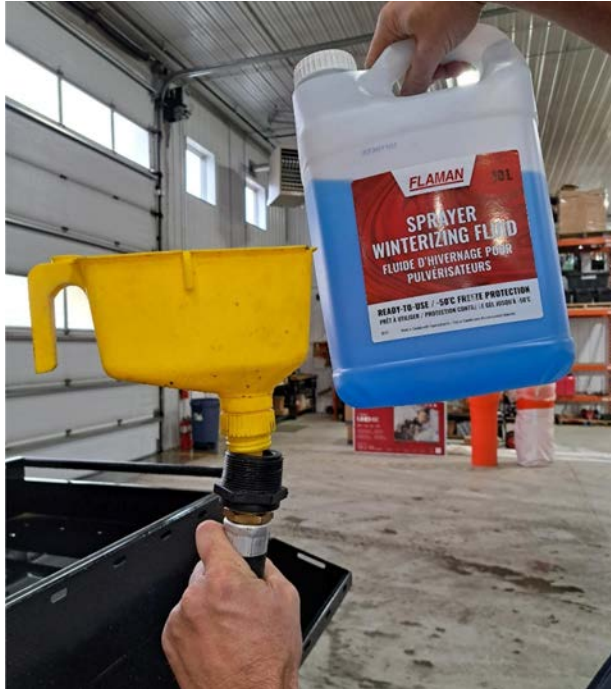

FLAMAN

2500 South Service Road West Swift Current, SK, S9H 5J9

Phone: 306.778.3338

Email:

www.flaman.com