

FLAMAN

QR300 Firefighting Suppression Skid Assembly Manual

QR300 parts manual includes serial number FSS3001-FSS30026



NOTE: Flaman believes in continuous improvement and as such, manuals, brochures and specifications are subject to change.

Published: July 30, 2024

Step 1: Prep a decent sized, clean area to assemble your QR300.



Step 2: Install Flaman decal.



Step 3: Install Serial Number Plate.



Step 4: Install hose reel.



Step 5: Record reel serial number and water pump serial number and record on work order.



Step 6: Gather pictured hardware to install pump, as well as fittings for intake and discharge connections.



Step 7: Hose for tank connection.



Step 8: Ball valve install for intake on pump, then connected to pump intake.



Step 9: Ball valve install for intake on pump, then connected to pump discharge.




Step 10: Hose for COX reel.



Step 11: Install gauge.



Step 12: Water tank mounting. Must drill out a 3/8" hole for eyebolt to install tank strap.

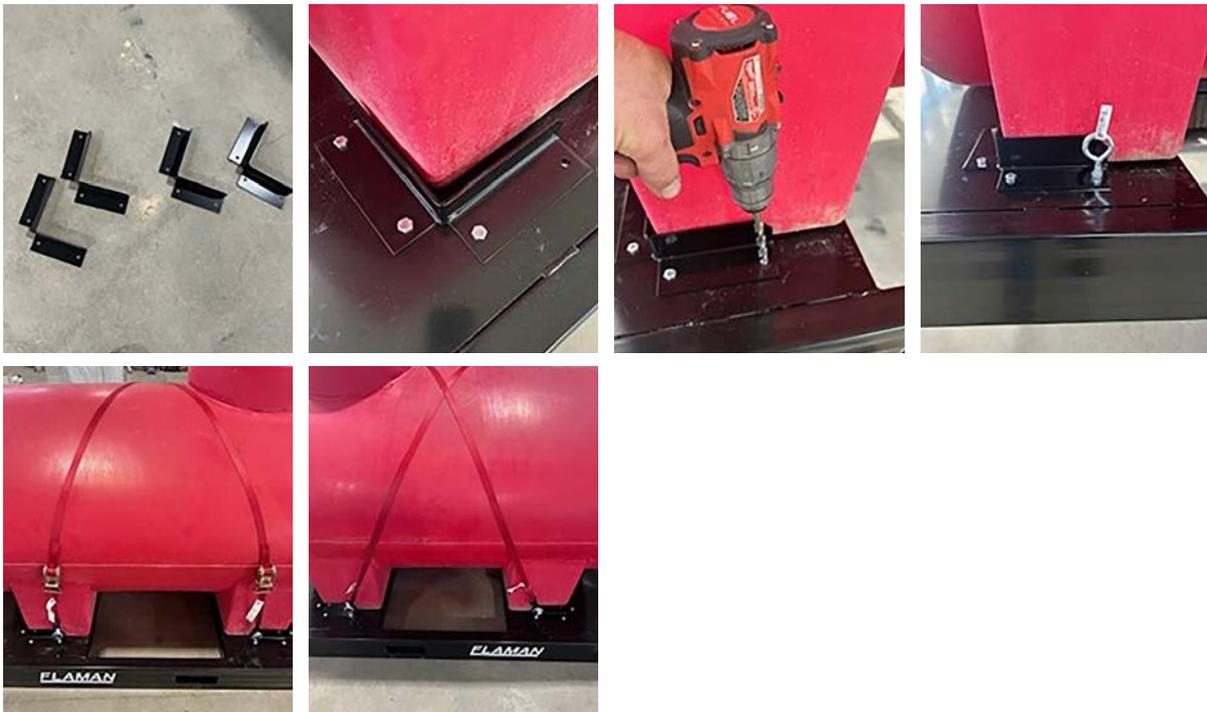

Step 13: Install muffler exhaust shield.



Step 14: Install hose on reel. Roll it so it is pulled from the top.



Step 15: Install fitting and fire nozzle.



Step 16: Fill pump with oil and fuel. Test unit for leaks. Repair as needed. Install a tag stating “unit ran and QC completed.”



2500 South Service Road West Swift Current, SK, S9H 5J9

Phone: 306.778.3338

Email:

www.flaman.com